


















 













Original	Recharge	Original	Recharge
	Power		Power
	Mute		Mute / Dimmer
	Prev		Back / Return
	Audio		Audio / Lang I/II
	Subt		Subtitle / EQ
	Aspect		Picture / Format
	Tv/Radio		TV/Radio /
	Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



