



Original	Recharge
AVR/AVC On	Power
AVR/AVC Off	Shift + Power
Power Tv	TV/R
Power VCR	Smart
Power DVD/VDP	Media
PHONO	1
CD	2
DVD/VDP	3
VCR-1	4
VCR-2 / V.AUX	5
TV/DBS	6
MD/Tape Mon	7
Tuner	8
Shift	9
Video Select	0
Input Mode	Guide
Surround Mode	Pre Ch

Original	Recharge
<< Deck-VCR	Shift + <<
< Deck-VCR	Shift + Play
Deck-VCR >	Shift + Pause
Deck-VCR >>	Shift + >>
Stop Deck-VCR	Shift + Stop
CH+	Ch +
CH-	Ch -
Disc Skip+	Blue
Play	Play
Stop	Stop
Pause	Pause
>>I	>>I
I<<	I<<
>>	>>
<<	<<
System/Setup	Menu
Surround/Menu	D. Menu





Original	Rechange	Original	Rechange
T.Tone/Return	Back		
Status/Display	Info		
Up	Up		
Down	Down		
Right	Right		
Left	Left		
CH.Select/Select	Ok		
Master Volume	Vol +		
Master Volum	Vol -		
Muting	Mute		
Tv Vol+	Shift + Vol +		
Tv Vol-	Shift + Vol -		
Tv CH+	Shift + Ch +		
Tv CH-	Shift + Ch -		



 





 



 



 

 







 



 
 


 
 
 



 
 
 
 
 






Original	Recharge	Original	Recharge
 AVR/AVC On	 Power		
 AVR/AVC Off	 Shift + Power		
 Play CD/MD/CDR-DVD/	 Play		
 Pause CD/MD/CDR-DVD/	 Pause		
 Stop CD/MD/CDR-DVD/	 Stop		
 CD/MD/CDR-DVD/ VDP >>I	 >>I		
 I<< CD/MD/CDR-DVD/	 I<<		
 CD/MD/CDR-DVD/ VDP >>	 >>		
 << CD/MD/CDR-DVD/	 <<		





Original		Recharge		Original		Recharge	
	AVR/AVC On		Power		T.Tone/Return		Back
	AVR/AVC Off	 + 	Shift + Power		Status/Display		Info
	CH+		Ch +		Up		Up
	CH-		Ch -		Down		Down
	Deck-VCR >>		>>		Right		Right
	<< Deck-VCR		<<		Left		Left
	Deck-VCR >	 + 	Shift + Pause		CH.Select/Select		Ok
	Stop Deck-VCR	 + 	Shift + Stop				
	Title		Exit				
	Disc Skip+ CD/MD/CDR-DVD/		Blue				
	Play CD/MD/CDR-DVD/		Play				
	Pause CD/MD/CDR-DVD/		Pause				
	Stop CD/MD/CDR-DVD/		Stop				
	CD/MD/CDR-DVD/ VDP >>I		>>I				
	I<< CD/MD/CDR-DVD/		I<<				
	System/Setup		Menu				
	Surround/Menu		D. Menu				

