





| Original | | Recharge | | Original | | Recharge | |
|---|-----------------|---|-----------------------|---|---------|---|-----------------------------|
|  | Power |  | Power |  | Red |  | Red / Netflix / Search |
|  | << |  | << / Tune- |  | Vol+ |  | Vol+ |
|  | Play/Archiv |  | Play / Slow |  | P+ |  | CH+ / Page+ |
|  | >> |  | >> / Tune+ |  | Green |  | Green / APP / Repeat |
|  | Rec |  | Rec / Rec Mode |  | Up |  | Up |
|  | Pause/Timeshift |  | Pause / Step / Freeze |  | Yellow |  | Yellow / YouTube / Repeat |
|  | Stop |  | Stop / Hold |  | Left |  | Left |
|  | 1 |  | 1 |  | OK |  | OK |
|  | 2 |  | 2 |  | Right |  | Right |
|  | 3 |  | 3 |  | Blue |  | Blue / Prime Video / Random |
|  | 4 |  | 4 |  | Down |  | Down |
|  | 5 |  | 5 |  | White/F |  | Info / Angle |
|  | 6 |  | 6 |  | Vol- |  | Vol- |
|  | 7 |  | 7 |  | P- |  | CH- / Page- |
|  | 8 |  | 8 |  | Mute |  | Mute / Dimmer |
|  | 9 |  | 9 |  | Back |  | Back / Return |
|  | 0/Input |  | 0 |  | Exit |  | Exit / Cancel / Clear |





| Original | | Recharge | | Original | | Recharge | |
|---|------|---|--------------------|----------|--|----------|--|
|  | Text |  | Text / Goto | | | | |
|  | EPG |  | Guide / EPG / -/-- | | | | |
|  | Home |  | Menu / Home | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

