




 

 




 

 
 

 
 

 

 
 










Original	Recharge
 Power	 Power
 Info	 Info
 Sleep	 Sleep
 Mute	 Mute
 Aspect	 Format
 Freeze	 Pause
 Picture	 Shift + Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 0	 0
 -/--	 SHIFT + GUIDE Shift + Guide
 R	 FAV PRE-CH Pre Ch
 MENU	 TOP MENU MENU Menu
 EPG	 -/-- GUIDE Guide
 Up	 Up
 Left	 Left
 ENTER	 OK Ok
 Right	 Right
 Down	 Down
 SOURCE	 TIMER AV AV
 BACK	 RETURN BACK Back
 P+	 + CH Ch +
 P-	 - CH Ch -
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -
 PIP	 HOME SMART Smart





Original	Recharge	Original	Recharge
Subtitle	Subt		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Cancel	Exit		
Index	Shift + Info		
Subpage	Shift + Subt		
Reveal	Media		
Size	Eject		
Hold	Stop		
Page +	Shift + Ch +		
Page -	Shift + Ch -		
Mix	Shift + Text		
TV / T.T.	Text		

Original	Recharge

