


 



















 


 








	Original	Rechange	Original	Rechange
	Standby	 Power		
	Mute	 Mute		
	Vol-	 Vol -		
	Source	 AV		
	Vol+	 Vol +		
	Bass-	 Down		
	Bass+	 Up		
	Treble-	 Left		
	EQ	 Smart		
	Treble+	 Right		
	I<<	 I<<		
	I<<	 <<		
	Play / Pause	 Play		
	Play / Pause	 Pause		
	Play / Pause	 Stop		
	>>I	 >>I		
	>>I	 >>		

