










































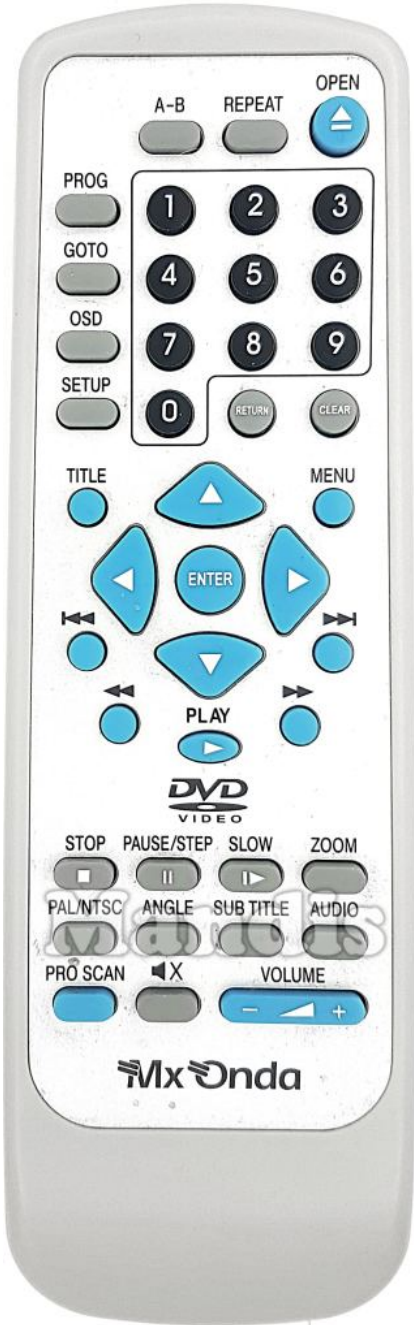


Original		Rechange		Original		Rechange	
A-B	A-B	 REPEAT A-B	Yellow / YouTube / Repeat	7	7	AUX - HDD	7
OPEN	Open		Eject / Surround	8	8	USB	8
REPEAT	Repeat	 REPEAT	Green / APP / Repeat	9	9	BLUETOOTH	9
PROG	Prog		TV/Radio /	0	0	HDMI - SAT	0
GOTO	Goto		Text / Goto		Up		Up
SETUP	Setup		Setup / OPT /		Down		Down
OSD	OSD		Display / Media		Enter		OK
RETURN	Return		Back / Return		Right		Right
CLEAR	Clear		Exit / Cancel / Clear		Left		Left
MENU	Menu		Menu / Home		I<<		I<< / Preset-
TITLE	Title		Sound / Title		<<		<< / Tune-
1	1		1		Play		Play / Slow
2	2		2		>>		>> / Tune+
3	3		3		>>I		>>I / Preset+
4	4		4		Stop		Stop / Hold
5	5		5		Pause/Step		Pause / Step / Freeze
6	6		6		Slow		Shift + Play / Slow





Original	Rechange	Original	Rechange
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
PAL/NTSC	PAL/NTSC	FORMAT PICTURE	Picture / Format
ANGLE	Angle	ANGLE INFO	Info / Angle
SUB TITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
PRO SCAN	Pro Scan	LIST SMART	Smart / List
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
VOLUME +	Volume+	+ VOL	Vol+
VOLUME -	Volume-	- VOL	Vol-

Original	Rechange	Original	Rechange

