



Original	Rechange
 Standby	 Power
 Open/Close	 Eject / Surround
 Prog	 TV/Radio /
 1	 1
 2	 2
 3	 3
 V-Mode	 Picture / Format
 4	 4
 5	 5
 6	 6
 A-Mode	 Sound / Title
 7	 7
 8	 8
 9	 9
 Setup	 Setup / OPT /
 Goto	 Text / Goto
 10+	 Guide / EPG / -/--

Original	Rechange
 0/10	 0
 Title	 Shift + Sound / Title
 Menu	 Menu / Home
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Step	 Shift + Pause / Step /
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze





	Original	Recharge		Original	Recharge
	I<<		I<< / Preset-		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	>>I		>>I / Preset+		
	Vol+		Vol+		
	Key+		CH+ / Page+		
	Virtual	 + 	Shift + Display / Media		
	OSD		Display / Media		
	Vol-		Vol-		
	Key-		CH- / Page-		
	Nothing	 + 	Shift + Setup / OPT / Tools		
	Zoom		Zoom / Size		
	Mute		Mute / Dimmer		
	L/R/ST		Smart / List		
	Tone		Exit / Cancel / Clear		
	S.Effect		AV / Input / RDS		

Original	Recharge

