
















 

 



 

 




Original	Recharge
 Power	 Power
 SD/HC	 Shift + Display / Media
 Input TV	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Aspect	 Picture / Format
 Menu	 Menu / Home
 N	 Shift + Up
 Direct Tv Rec	 D.Menu / Top
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 Smart / List
 Viera Link	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [≡♦]/Sttl	 Subtitle / EQ
 [≡i]/Index	 Shift + Info / Angle
 [≡+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Recharge	Original	Recharge
7	7	7	7
8	8	8	8
9	9	9	9
Mute	Mute / Dimmer		
0	0		
OIO	Shift + Smart / List		
Vol+	Vol+		
CH+	CH+ / Page+		
Vol-	Vol-		
CH-	CH- / Page-		
Power Down	Shift + Power		
Programme	Shift + CH- /		
Programme Up	Shift + CH+ /		
<<</l<<<	<< / Tune-		
Play	Play / Slow		
>>>/>>>l	>> / Tune+		
Stop	Stop / Hold		

Original	Recharge	Original	Recharge
Pause/Step	Pause / Step / Freeze		
Rec	Rec / Rec Mode		

