



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
Recall	Back / Return
Source	AV / Input / RDS
OK	OK
Up	Up

Original	Rechange
Down	Down
Right	Right
Left	Left
Prog+	CH+ / Page+
Prog-	CH- / Page-
Vol+	Vol+
Info	Info / Angle
EPG	Guide / EPG / -/--
Menu	Menu / Home
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
Sleep	Sleep / Timer
Cancel	Exit / Cancel / Clear
TXT	Text / Goto
Size	Zoom / Size





Original		Rechange		Original		Rechange	
	Hold		Stop / Hold				
	Mix	+	Shift + Text /				
	Reveal		TV/Radio /				
	Index		D.Menu / Top				
	Subtitle		Subtitle / EQ				
	Fav		Fav / Marker / PC				
	Subpage		Eject / Surround				
	Format	+	Shift + Picture / Format				
	Vol-		Vol-				
	P Mode		Picture / Format				
	Text		Setup / OPT /				
	S Mode		Sound / Title				
	3DNR		Smart / List				
	MTS		Display / Media				

