 

 

 

 



 



 



 

 

 









 

 



 



 

 

 



 



 

 

 

 

 









Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Right		Right
	Epg / Setup		Picture / Format		Vol+		Vol+
	Dvd / Av / Dtv		AV / Input / RDS		Ok		OK
	Dvd/Usb/Card		Shift + 2		1		1
	Info / Osd		Info / Angle		2		2
	→←Search		Zoom / Size		3		3
	Audio		Audio / Lang I/II		4		4
	Subtitle		Subtitle / EQ		5		5
	Menu		Menu / Home		6		6
	Exit/Title		Exit / Cancel / Clear		7		7
	Fav / Zoom		Fav / Marker / PC		8		8
	Up		Up		9		9
	Ch+		CH+ / Page+		0/10		0
	Down		Down		10+		Guide / EPG / -/-
	Ch-		CH- / Page-		Dvd Vol+		Shift + Vol+
	Left		Left		Dvd Vol-		Shift + Vol-





Original	Rechange
Tv-R / Repeat	TV/Radio /
Text / Program	Text / Goto
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<< / Prev	I<< / Preset-
>>I / Next	>>I / Preset+
<< / Rev	<< / Tune-
>> / Fwd	>> / Tune+

Original	Rechange

