























 

 
 

 










Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		MTS I/II		Audio / Lang I/II
	1		1		CH+		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		Sub-T		Subtitle / EQ
	4		4		CH-		CH- / Page-
	5		5		Aspect		Shift + Picture / Format
	6		6		Freeze		Shift + Pause / Step
	7		7		Sleep		Sleep / Timer
	8		8		Source		AV / Input / RDS
	9		9		Up		Up
	0		Shift + Guide / EPG / -/--		Display		Display / Media
	Recall		0		Left		Left
	Back / Return		0		OK		OK
	Picture / Format		Back / Return		Right		Right
	Sound / Title		Picture / Format		Menu		Menu / Home
	Fav / Marker / PC		Sound / Title		Down		Down



