



Original	Rechange	Original	Rechange
POWER	Power	GAME / BLUE	Blue / Prime Video / Random
1	1	SLEEP / GREEN	Green / APP / Repeat
2	2	SLEEP / GREEN	Sleep / Timer
3	3	STATUS /	Yellow / YouTube / Repeat
4	4	PP/CANCEL	Exit / Cancel / Clear
5	5	P.S	Display / Media
6	6	MUTE	Mute / Dimmer
7	7	UP	Up
8	8	CH+	CH+ / Page+
9	9	TV/TEXT	Text / Goto
0	0	LEFT	Left
SUBPAGE	Guide / EPG / -/--	VOL-	Vol-
I/II	Audio / Lang I/II	MENU	Menu / Home
SWAP / RED	Back / Return	RIGHT	Right
SWAP / RED	Red / Netflix / Search	VOL+	Vol+
AV	AV / Input / RDS	DOWN	Down
FREEZE	Pause / Step / Freeze	CH-	CH- / Page-

Original	Rechange	Original	Rechange
GAME / BLUE	Blue / Prime Video / Random	SLEEP / GREEN	Green / APP / Repeat
SLEEP / GREEN	Sleep / Timer	STATUS /	Yellow / YouTube / Repeat
PP/CANCEL	Exit / Cancel / Clear	P.S	Display / Media
MUTE	Mute / Dimmer	UP	Up
CH+	CH+ / Page+	TV/TEXT	Text / Goto
LEFT	Left	VOL-	Vol-
MENU	Menu / Home	RIGHT	Right
VOL+	Vol+	DOWN	Down
CH-	CH- / Page-		





	Original	Rechange
	INDEX	Info / Angle
	T.MODE	Setup / OPT /
	ZOOM/SIZE	Zoom / Size
	HOLD	Stop / Hold
	REVEAL	Play / Slow
	MIX	+ Shift + Text /
	OK	OK
	T. BRI	Smart / List
	PIP/POP	Picture / Format
	MP/SP	Sound / Title

Original	Rechange

