



 








 


 

 
 

 

 


 
 
 



 










Original		Rechange	
	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	(O/I/II/Audio		Dual
	Menu		Menu
	Exit		Exit

Original		Rechange	
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Index		Media
	List		List
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	♥		Pre Ch
	Sleep		Sleep
	EPG		Guide
	Recall		Back
	Red		Red
	<<		<<





Original		Rechange		Original	Rechange
	>>		>>		
	Green		Green		
	Yellow		Yellow		
	<<		<<		
	>>		>>		
	Blue		Blue		
	[=]		Text		
	Play		Play		
	Pause		Pause		
	Stop/Still		Stop		
	[=+]		Format		
	Radio		TV/R		
	[=◆]/[+]		3D		
	[=x]		Options		
	[=O]/Subtitle		Subt		
	DMP		Smart		
	Rec		Rec		

