



 



 


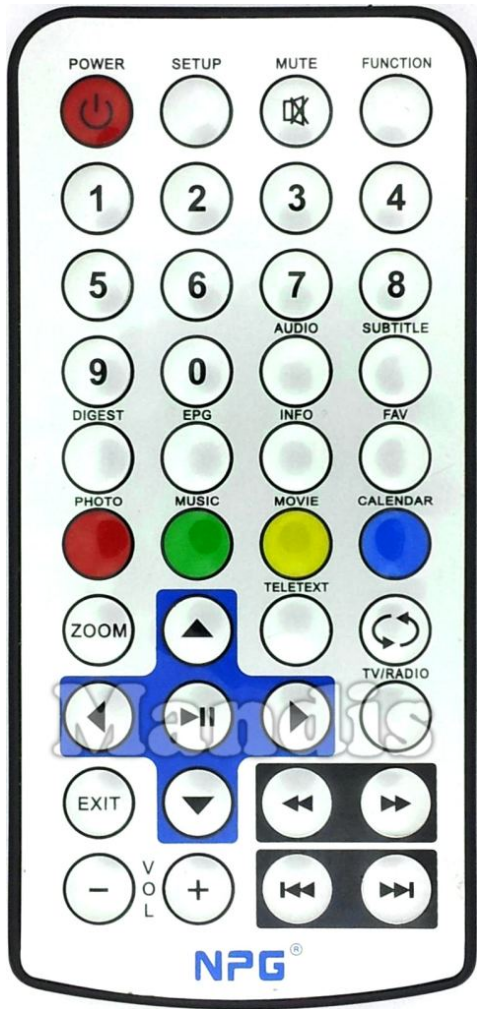



	Original	Recharge
	Power	Power
	Setup	Options
	Mute	Mute
	Function	Menu
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	Audio	Dual
	Subtitle	Subt
	Digest	Smart

	Original	Recharge
	EPG	Guide
	Info	Info
	FAV	Pre Ch
	Red/Photo	Red
	Green/Music	Green
	Yellow/Movie	Yellow
	Blue/Calendar	Blue
	Zoom	Eject
	Teletext	Text
	Tv/Radio	TV/R
	Recall	Back
	Exit	Exit
	Up	Up
	Down	Down
	Right	Right
	Left	Left
	Play/Pause	Ok





	Original	Rechange	Original	Rechange
	Play	 Play		
	Pause	 Pause		
	<<	 <<		
	>>	 >>		
	>>	 >>		
	<<	  <<		
	Vol+	 Vol +		
	Vol-	 Vol -		

