

 

 

 











 

 



 



























 











 













 







 









	Original	Rechange	Original	Rechange
	 Power	 Power	 Slow	 Shift + Play /
	 Mute	 Mute / Dimmer	 Menu	 Menu / Home
	 1	 1	 EPG	 Guide / EPG / -/-
	 2	 2	 Exit	 Exit / Cancel / Clear
	 3	 3	 Zoom	 Zoom / Size
	 4	 4	 Play	 Play / Slow
	 5	 5	 Pause	 Pause / Step / Freeze
	 6	 6	 <<	 << / Tune-
	 7	 7	 >>	 >> / Tune+
	 8	 8	 Rec	 Rec / Rec Mode
	 9	 9	 Stop	 Stop / Hold
	 0	 0	 UP	 Up
	 Info	 Info / Angle	 DOWN	 Down
	 FAV	 Fav / Marker / PC	 Right	 Right
	 Page+	 Shift + CH+ /	 Left	 Left
	 Page-	 Shift + CH- /	 OK	 OK
	 Audio	 Audio / Lang I/II	 CH+	 CH+ / Page+





Original		Recharge		Original	Recharge
	CH-		CH- / Page-		
	Vol+		Vol+		
	Vol-		Vol-		
	TV/Radio		TV/Radio /		
	Teletext		Text / Goto		
	Subtitle		Subtitle / EQ		
	Return		Back / Return		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Navi		Display / Media		

