














 
























































Original	Recharge	Original	Recharge
 Power	 Power	 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search	 CH-	 CH- / Page-
 Green	 Green / APP / Repeat	 Up	 Up
 Yellow	 Yellow / YouTube / Repeat	 Down	 Down
 Blue	 Blue / Prime Video / Random	 Right	 Right
 TV/SAT	 AV / Input / RDS	 Left	 Left
 TV/Radio	 TV/Radio /	 OK	 OK
 Zoom	 Zoom / Size	 Vol+	 Vol+
 List	 Smart / List	 Vol-	 Vol-
 Audio	 Audio / Lang I/II	 Recall	 Back / Return
 EPG	 Guide / EPG / -/--	 P+	 >> / Preset+
 Timer	 Sleep / Timer	 P-	 << / Preset-
 Text	 Text / Goto	 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 1	 1
 Menu	 Menu / Home	 2	 2
 M/P	 Display / Media	 3	 3
 Mute	 Mute / Dimmer	 4	 4





Original		Recharge	
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Pause		Pause / Step / Freeze

Original		Recharge	





Original	Rechange
Power	Power
SAT	Smart / List
Info	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0 / Zoom	Zoom / Size
0 / Zoom	0
Audio	Audio / Lang I/II
Mute	Mute / Dimmer
Recall	Back / Return

Original	Rechange
FAV	Fav / Marker / PC
Up / CH+	CH+ / Page+
Down / CH-	Down
Up / CH+	Up
Right / Vol+	Right
Right / Vol+	Vol+
Down / CH-	CH- / Page-
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Red / Text	Red / Netflix / Search
Red / Text	Text / Goto
Multivideo	Display / Media








 
















 















 



















 



 






Original	Recharge	Original	Recharge
 Yellow / Subtitle	 Yellow / YouTube / Repeat		
 Yellow / Subtitle	 Subtitle / EQ		
 TV / AV	 AV / Input / RDS		
 Green / P/N	 Green / APP / Repeat		
 TV / Radio	 TV/Radio /		
 SAT	 Shift + 0		
 EPG	 Guide / EPG / -/--		

Original	Recharge





Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Rechange	Original	Rechange
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--




























































Original	Recharge	Original	Recharge
0/10	HDMI - BAT 0		
FAV Pref.	PC FAV MARKER Fav / Marker / PC		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		
Dec/Pause	STEP-FREEZE II Pause / Step / Freeze		
	LIST SMART Smart / List		
	TOP MENU D.MENU D.Menu / Top		











Original	Recharge	Original	Recharge
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Recharge	Original	Recharge
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-





Original	Recharge	
0/Sleptimer	 0	0
FAV		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random

Original	Recharge

