






 

 


 
 


 







 





 






 


 








 













 

 

 




Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		Ok		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Sound		Shift + Dual
	8		8		Pic		Shift + Format
	9		9		Ch+		Ch +
	0		0		Ch-		Ch -
	Audio		Dual		Sleep		Sleep
	Recall		Back		Aspect		Format
	Tv Menu		Menu		Freeze		Eject
	Source		AV		Tv/Radio		TV/R
	ChList		List		Text		Text





Original		Rechange		Original		Rechange	
	Epg		Guide		I<<		I<<
	Fav		Pre Ch		>>I		>>I
	Info		Info		Play		Play
	Red		Red		Pause		Pause
	Green		Green		Stop		Stop
	Yellow		Yellow		Rec/Rep		Rec
	Blue		Blue				
	Reveal		Media				
	Hold		D. Menu				
	Index		Shift + Info				
	Subpage		Shift + AV				
	List		Smart				
	Mix		Options				
	Subtitle		Subt				
	Size		3D				
	<<		<<				
	>>		>>				

