























 






 









	Original	Rechange	Original	Rechange
	Mute	 Mute / Dimmer		 CH+ / Page+
	EPG	 Guide / EPG / -/--		 Up
	Info	 Info / Angle		 0
	DVB/AV	 AV / Input / RDS		 Audio / Lang I/II
	Pause	 Pause / Step / Freeze		 Vol-
	1	 1		 Left
	2	 2		 OK
	3	 3		 Vol+
	Fav	 Fav / Marker / PC		 Right
	4	 4		 Text / Goto
	5	 5		 Menu / Home
	6	 6		 CH- / Page-
	TV/Radio	 TV/Radio /		 Down
	7	 7		 Exit / Cancel / Clear
	8	 8		 Subtitle / EQ
	9	 9		 Red / Netflix / Search
	Recall	 Back / Return		 Smart / List





Original	Recharge
 Green / Screen	 Green / APP / Repeat
 Green / Screen	 Display / Media
 Yellow / Speaker	 Sound / Title
 Yellow / Speaker	 Yellow / YouTube / Repeat
 Blue / Aspect	 Blue / Prime Video / Random
 Blue / Aspect	 Picture / Format

Original	Recharge

