




 










 
 



 
 









 

 







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Display	 Display / Media
 Nicam	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 +/-	 Shift + Guide / EPG / +/-
 Recall	 Back / Return
 LCD Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Text	 Text / Goto
 Hold	 Stop / Hold





Original	Recharge
INDEX Index	TOP MENU D.MENU D.Menu / Top
SIZE Size	SIZE ZOOM Zoom / Size
EPG EPG	- -- GUIDE EPG Guide / EPG / - --
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
SUBPAGE Subpage	SHIFT + EQ SUBTITLE Shift + Subtitle / EQ
REVEAL Reveal	PROGRAM TV/ RADIO TV/Radio /
Red Red	NETFLIX SEARCH Red / Netflix / Search
Green Green	APP REPEAT Green / APP / Repeat
Yellow Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue Blue	Prime Video RANDOM Blue / Prime Video / Random
FAV FAV	PC FAV MARKER Fav / Marker / PC
FAV- FAV-	TUNE- TUNE- << / Tune-
FAV+ FAV+	TUNE+ TUNE+ >> / Tune+
Lang Lang	LANG I/II AUDIO Audio / Lang I/II
Aspect Aspect	SHIFT + FORMAT PICTURE Shift + Picture / Format

Original	Recharge

