









 












 














 


 
 

 
 




 



 



 








 




Original		Rechange		Original		Rechange	
	On		Power		SP A/B		Sound / Title
	Standby		Shift + Power		Up		Up
	V1		1		Muting		Mute / Dimmer
	V2		4		Left		Left
	V3		7		Enter		OK
	Multi CH		8		Right		Right
	DVD		2		Return		Back / Return
	Tape		5		Down		Down
	Tuner		6		Setup		Setup / OPT /
	CD		3		Pause		Pause / Step / Freeze
	Tuner/Dimmer		0		Play		Play / Slow
	Tuner/Dimmer		Shift + Mute / Dimmer		Stop		Stop / Hold
	Sleep		Sleep / Timer		<<		<< / Tune-
	CH/Disc+		CH+ / Page+		>>		>> / Tune+
	Vol+		Vol+		I<<		I<< / Preset-
	CH/Disc-		CH- / Page-		I>>		I>> / Preset+
	Vol-		Vol-		Stereo		Red / Netflix / Search







Original	Rechange	Original	Rechange
On	Power	Up	Up
Standby	Shift + Power	Muting/Previous Menu	Menu / Home
1	1	Muting/Previous Menu	Mute / Dimmer
2	2	Left	Left
3	3	Enter	OK
4	4	Right	Right
5	5	Return	Back / Return
6	6	Down	Down
7	7	Setup	Setup / OPT /
8	8	Pause	Pause / Step / Freeze
9	9	Play	Play / Slow
+10	Guide / EPG / -/--	Stop	Stop / Hold
0	0	<<	<< / Tune-
CLR	Exit / Cancel / Clear	>>	>> / Tune+
CH/Disc+	CH+ / Page+	I<<	I<< / Preset-
CH/Disc-	CH- / Page-	>>I	>>I / Preset+
Top Menu	D.Menu / Top	Audio	Audio / Lang I/II



















 





 







 



 



















Original	Rechange
 On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 On CD	 Shift + Power
 Standby CD	 Shift + Mute / Dimmer
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5







Original		Rechange		Original		Rechange	
	On		Power		Right		Right
	Standby		Shift + Power		Down		Down
	1		1		Setup		Setup / OPT /
	2		2		Pause		Pause / Step / Freeze
	3		3		Play		Play / Slow
	4		4		Stop		Stop / Hold
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+
	7		7				
	8		8				
	9		9				
	0		0				
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	Up		Up				
	Left		Left				
	Enter		OK				

