


 


 




 











 

















 

 

 

 

 



 






 


 



 




Original		Rechange		Original		Rechange	
	RCVR On		Power		RCVR Right		Right
	RCVR Standby		Shift + Power		RCVR Down		Down
	RCVR Sleep		Sleep		RCVR Level		Media
	RCVR Return		Back		RCVR Level Up		Smart
	RCVR Setup		Options		RCVR I<<		I<<
	RCVR		Ch +		RCVR Play		Play
	RCVR CH-/Disc-		Ch -		RCVR >>I		>>I
	RCVR Vol+		Vol +		RCVR <<		<<
	RCVR Vol-		Vol -		RCVR Stop		Stop
	RCVR CH Sel / Top Menu		Shift + Menu		RCVR >>		>>
	RCVR CH Sel / Top Menu		D. Menu		RCVR Rec /		Rec
	RCVR Test / Menu		Menu		RCVR Play Rev.		Pause
	RCVR Audio Sel		Dual		Open / Close		Eject
	RCVR Muting		Mute		RCVR Input Sel. 1		1
	RCVR Up		Up		RCVR Input Sel. 2		2
	RCVR Left		Left		RCVR Input Sel. 3		3
	RCVR Enter		Ok		RCVR Input Sel. 4		4








 







 











 



 



 



 





 

 

 
 
 

 



 

 





 






	Original	Recharge	Recharge
	RCVR Input Sel.	<b>5</b>	5
	RCVR Input Sel.	<b>6</b>	6
	RCVR Input Sel.	<b>7</b>	7
	RCVR Input Sel.	<b>8</b>	8
	RCVR Input Sel.	<b>9</b>	9
	RCVR Input Sel.	<b>0</b>	0
	RCVR Pure A	<b>SHIFT + 1</b>	Shift + 1
	RCVR Direct	<b>SHIFT + 2</b>	Shift + 2
	RCVR Stereo	<b>SHIFT + 3</b>	Shift + 3
	RCVR Surr.	<b>SHIFT + 4</b>	Shift + 4
	RCVR THX	<b>SHIFT + 5</b>	Shift + 5
	RCVR All St.	<b>SHIFT + 6</b>	Shift + 6
	RCVR ◀ DSP	<b>SHIFT + 7</b>	Shift + 7
	RCVR DSP ▶	<b>SHIFT + 8</b>	Shift + 8
	RCVR Re-EQ	<b>SHIFT + 9</b>	Shift + 9
	RCVR Dimmer	<b>SHIFT + 0</b>	Shift + 0
	RCVR Display	<b>DISPLAY INFO</b>	Info

	Original	Recharge	Recharge
	RCVR Zone 2	<b>FAV PRE-CH</b>	Pre Ch
	RCVR Display	<b>- / -</b>	Guide







Original		Rechange		Original		Rechange	
	DVD On		Power		DVD Play		Play
	DVD Standby		Shift + Power		DVD >>I		>>I
	DVD Sleep		Sleep		DVD <<		<<
	DVD Return		Back		DVD Stop		Stop
	DVD Setup		Options		DVD >>		>>
	DVD Disc+		Ch +		DVD Random		Rec
	DVD Disc-		Ch -		DVD Pause		Pause
	DVD Vol+		Vol +		DVD Eject		Exit
	DVD Vol-		Vol -		DVD Input Sel.		1
	DVD CH Sel / Top Menu		Shift + Menu		DVD Input Sel. CD		2
	DVD CH Sel / Top Menu		D. Menu		DVD Input Sel. V1		3
	DVD Test /		Menu		DVD Input Sel. V2		4
	DVD Audio Sel / TV/VCR		TV/R		DVD Input Sel. V3		5
	Muting		Mute		DVD Input Sel.		6
	DVD Angle /		Format		DVD Input Sel. V3		7
	DVD Subtitle / Level+		Subt		DVD Input Sel. V4		8
	DVD I<<		I<<		DVD Input Sel. V5		9
















 













 





 

 

 





 



 



 




Original	Rechange
DVD Input Sel. PH	0
DVD 1	+  Shift + 1
DVD 2	+  Shift + 2
DVD 3	+  Shift + 3
DVD 4	+  Shift + 4
DVD 5	+  Shift + 5
DVD 6	+  Shift + 6
DVD 7	+  Shift + 7
DVD 8	+  Shift + 8
DVD 9	+  Shift + 9
DVD 0	+  Shift + 0
DVD +10 / --/--	Guide
DVD Search/Enter	Pre Ch

Original	Rechange






 



 



 

 



 

 

 

 



 



 







 
 
 
 

 


 








 


 
 


 








Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		Ch +		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	Subtitle		Subt		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Random		Rec				
	Eject		Eject				
	1		1				





Original	Rechange	Original	Rechange
 NET A	 Smart	 Play	 Play
 On	 Power	 >>	 >>
 Standby	 Shift + Power	 <<	 <<
 Sleep	 Sleep	 Stop	 Stop
 Display	 Info	 >>	 >>
 Setup	 Options	 Rec / Random	 Rec
 CH+ / Disc+	 Ch +	 Pause / Play Rev.	 Pause
 CH- / Disc-	 Ch -	 Eject / Repeat	 Exit
 Vol+	 Vol +	 Eject / Repeat	 Text
 Vol-	 Vol -	 Album	 Red
 Up	 Up	 Artist	 Green
 Left	 Left	 Genre	 Yellow
 Enter	 Ok	 Playlist	 Blue
 Right	 Right	 1 / Symbols	 1
 Down	 Down	 2 / ABC	 2
 Muting	 Mute	 3 / DEF	 3
 I<<	 I<<	 4 / GHI	 4







Original		Rechange	
	5 / JKL		5
	6 / MNO		6
	7 / PQRS		7
	8 / TUV		8
	9 / WXYZ		9
	0 / Space		0
	+10 / CAPS		Guide
	Search / Del		Pre Ch

Original		Rechange	

