 










 


 



 






















 




 


 





 














 

 


 

 






 
 

 











Original		Rechange		Original		Rechange	
	Power Receiver		Power		CD		Shift + 3
	1		1		D.TUN		Smart / List
	VCR / DVR		Shift + 4		Dimmer		Shift + Mute / Dimmer
	2		2		0		0
	CBL / SAT		Shift + 0		Sleep		Sleep / Timer
	3		3		CH+		CH+ / Page+
	4		4		Vol+		Vol+
	AUX		Shift + 7		CH-		CH- / Page-
	5		5		Vol-		Vol-
	Multi CH		Shift + 1		SP A/B		Info / Angle
	6		6		Up		Up
	DVD		Shift + 2		Muting		Mute / Dimmer
	7		7		Left		Left
	TAPE		Shift + 5		Enter		OK
	8		8		Right		Right
	TUNER		Shift + 6		Setup		Setup / OPT /
	9		9		Down		Down





Original	Rechange	Original	Rechange
 Return	 Back / Return	 L.Night	 Menu / Home
 Pause / Play Rev.	 Pause / Step / Freeze	 Cine FLTR	 D.Menu / Top
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Stereo	 Audio / Lang I/II		
 Surround	 Eject / Surround		
 < Listening Mode	 Shift + I<< / Preset-		
 Listening Mode >	 Shift + >>I / Preset+		
 Test Tone	 Red / Netflix / Search		
 CH Sel	 Green / APP / Repeat		
 Level-	 Yellow / YouTube / Repeat		
 Level+	 Blue / Prime Video / Random		
 Display	 Display / Media		





Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR/12/Sleep	Sleep / Timer
CLR/12/Sleep	Exit / Cancel / Clear
Guide/Top	D.Menu / Top
Up	Up
Previous Menu/Muting	Menu / Home

Original	Rechange
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+





Original	Recharge	Original	Recharge
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Level-/Random	Blue / Prime Video / Random		
Level+/Repeat	Green / APP / Repeat		
Display	Display / Media		
Play Mode VCR	Shift + 4		
Play Mode DVD	Shift + 2		
Play Mode HDD	Shift + 7		

Original	Recharge



 



















 











 





 












 



 






Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/-/-	 Guide / EPG / -/-
 0	 0
 CLR/12/Sleep	 Sleep / Timer
 CLR/12/Sleep	 Exit / Cancel / Clear
 Disc/Album	 CH+ / Page+
 Vol+	 Vol+
 Disc/Album CH-	 CH- / Page-

Original	Rechange
 Vol-	 Vol-
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Level-/Random	 Blue / Prime Video / Random
 Level+/Repeat	 Green / APP / Repeat
 Display	 Display / Media






 



 






Original	Rechange
 Standby / On	 Power
 VCR/DVR	 4
 CBL/SAT	 0
 AUX	 7
 Multi CH	 1
 DVD	 2
 Tape	 5
 Tuner	 6
 CD	 3
 D.Tun	 Smart / List
 Dimmer	 Shift + Dimmer / Mute
 CLR / Sleep	 Sleep / Timer
 CLR / Sleep	 Exit / Cancel / Clear
 CH Disc	 CH+ / Page+
 Vol+	 Vol+
 CH Disc Album-	 CH- / Page-
 Vol-	 Vol-

Original	Rechange
 Up	 Up
 Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Rev. Play	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 I<< / Preset-
 Listening Mode >	 >>I / Preset+





Original	Recharge	Original	Recharge
 Test Tone	 Red / Netflix / Search		
 CH Sel	 Green / APP / Repeat		
 Level-	 Yellow / YouTube / Repeat		
 Level+	 Blue / Prime Video / Random		
 Display	 Display / Media		
 L.Night / Play Mode DVD	 Menu / Home		
 Cine FLTR / Play Mode HDD	 D.Menu / Top		

