
 




 







 

 

 










Original		Rechange		Original		Rechange	
	Power Receiver		Power		Muting		Mute
	Display		Info		Vol+		Vol +
	BD / DVD		1		Vol-		Vol -
	VCR / DVR		2		Home		Smart
	CBL / SAT		3		CH+		Ch +
	GAME		4		CH-		Ch -
	PC		5		SP Layout		D. Menu
	AUX		6		Menu		Menu
	TUNER		AV		Up		Up
	TUNER		7		Left		Left
	TV / CD		8		Enter		Ok
	PHONO		9		Right		Right
	PORT		Guide		Down		Down
	NET		Shift + Media		Setup		Options
	NET		0		Return		Back
	USB		Media		I<<		I<<
	USB		Pre Ch		>>I		>>I





Original	Rechange
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 Pause / Play Rev.	 Pause
 Stop	 Stop
 Movie / TV	 Red
 Music	 Green
 Game	 Yellow
 Thx	 Blue
 Dimmer	 Dual
 D.TUN	 TV/R
 Sleep	 Sleep
 1	 Shift + 1
 2	 Shift + 2
 3	 Shift + 3
 4	 Shift + 4
 5	 Shift + 5

Original	Rechange
 6	 Shift + 6
 7	 Shift + 7
 8	 Shift + 8
 9	 Shift + 9
 0	 Shift + 0





Original		Rechange		Original		Rechange	
	Power Receiver		Power		Vol+		Vol +
	BD / DVD		1		Vol-		Vol -
	VCR / DVR		2		Home		Smart
	CBL / SAT		3		CH+ / Album+		Ch +
	GAME		4		CH- / Album-		Ch -
	PC		5		Top Menu		D. Menu
	AUX		6		Menu		Menu
	TUNER		AV		Up		Up
	TUNER		7		Page- / Playlist-		Left
	TV / CD		8		Enter		Ok
	PHONO		9		Page+ / Playlist+		Right
	PORT		Guide		Down		Down
	NET		Shift + Media		Setup		Options
	NET		0		Return		Back
	USB		Media		I<<		I<<
	USB		Pre Ch		>>I		>>I
	Muting		Mute		<<		<<






 


 
 



 











Original		Rechange		Original		Rechange	
	Power Receiver		Power		Muting		Mute
	Display		Info		Vol+		Vol +
	BD / DVD		1		Vol-		Vol -
	VCR / DVR		2		Home		Smart
	CBL / SAT		3		CH+		Ch +
	GAME		4		CH-		Ch -
	PC		5		SP Layout		Shift + Menu
	AUX		6		Menu		Menu
	TUNER		7		Up		Up
	TV / CD		8		Left		Left
	PHONO		9		Enter		Ok
	TUNER		AV		Right		Right
	PORT		Guide		Down		Down
	NET		0		Setup		Options
	NET		Shift + Media		Return		Back
	USB		Pre Ch		I<<		I<<
	USB		Media		>>I		>>I






Original	Rechange
	 <<<
	 >>>
	 Play
	 Pause
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Original	Rechange
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0





 



 
 






 

 
 

 

 




Original		Rechange		Original		Rechange	
	Power		Power		Muting		Mute
	Display		Info		Vol+		Vol +
	BD / DVD		1		Vol-		Vol -
	VCR / DVR		2		Home		Smart
	CBL / SAT		3		CH+		Ch +
	GAME		4		CH-		Ch -
	PC		5		SP Layout		Shift + Menu
	AUX		6		Menu		Menu
	TUNER		7		Up		Up
	TUNER		AV		Left		Left
	TV / CD		8		Enter		Ok
	PHONO		9		Right		Right
	PORT		Guide		Down		Down
	NET		0		Setup		Options
	NET		Shift + Media		Return		Back
	USB		Pre Ch		I<<		I<<
	USB		Media		>>I		>>I





Original	Rechange
	 <<
	 >>
	 Play
	 Pause
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Original	Rechange
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0

