



























 



 










 

 


























 













 











 














Original	Recharge	Original	Recharge
 ON	 Power	 CH+	 CH+ / Page+
 Standby	 Shift + Power	 Vol+	 Vol+
 Display	 Display / Media	 CH-	 CH- / Page-
 BD / DVD	 2	 Vol-	 Vol-
 VCR / DVR	 4	 SP Layout	 Info / Angle
 CBL / SAT	 0	 Up	 Up
 GAME	 9	 Menu	 Menu / Home
 PC	 Fav / Marker / PC	 Left	 Left
 AUX	 7	 Enter	 OK
 TUNER	 6	 Right	 Right
 TV/CD	 1	 Setup	 Setup / OPT /
 TV/CD	 3	 Down	 Down
 PHONO	 Shift + Fav / Marker / PC	 Return	 Back / Return
 PORT	 Guide / EPG / -/--	 Home	 D.Menu / Top
 NET	 5	 I<<	 I<< / Preset-
 USB	 8	 >>I	 >>I / Preset+
 Muting	 Mute / Dimmer	 <<	 << / Tune-































 



 










 

 
























Original	Rechange
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Rechange
	
	
	
	





Original	Recharge	Original	Recharge
 ON	 Power	 CH+ / Album+	 CH+ / Page+
 Standby	 Shift + Power	 Vol+	 Vol+
 Display	 Display / Media	 CH- / Album-	 CH- / Page-
 BD / DVD	 2	 Vol-	 Vol-
 VCR / DVR	 4	 Top Menu	 Info / Angle
 CBL / SAT	 0	 Up	 Up
 GAME	 9	 Menu	 Menu / Home
 PC	 Fav / Marker / PC	 Left / Playlist/Category-	 Left
 AUX	 7	 Enter	 OK
 TUNER	 6	 Right / Playlist/Category	 Right
 TV/CD	 1	 Setup	 Setup / OPT /
 TV/CD	 3	 Down	 Down
 PHONO	 Shift + Fav / Marker / PC	 Return	 Back / Return
 PORT	 Guide / EPG / -/--	 Home	 D.Menu / Top
 NET	 5	 I<<	 I<< / Preset-
 USB	 8	 >>I	 >>I / Preset+
 Muting	 Mute / Dimmer	 <<	 << / Tune-





Original	Rechange
Play	Play / Slow
>>	>> / Tune+
Pause / Play Rev.	Pause / Step / Freeze
Stop	Stop / Hold
Search	Red / Netflix / Search
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
Play Mode	Yellow / YouTube / Repeat
1	Shift + 1
2	Shift + 2
3	Shift + 3
4	Shift + 4
5	Shift + 5
6	Shift + 6
7	Shift + 7
8	Shift + 8
9	Shift + 9

Original	Rechange
--/-- +10	Shift + Guide / EPG / --/--
0	Shift + 0
CLR	Sleep / Timer

