









 

 

 

 



 

 


 
 













Original	Rechange
 Power	 Power
 i	 DISPLAY INFO
 Input Select	 TIMER AV
 Picture Size	 PICTURE FORMAT
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer	 SHIFT + TIMER AV Shift + AV
 Mute	 MUTE Mute
 [≡o] [≡o]/P↔P	 RETURN BACK Back

Original	Rechange
 Audio I/II	 SOUND DUAL Dual
 [≡?] [≡?]	 SETTINGS OPT Options
 [≡◇] [≡◇]	 ECO 3D 3D
 Menu	 TOP MENU MENU Menu
 [≡] [≡]	 REPEAT TEXT Text
 P+ P+	 + CH Ch +
 Up	 Up Up
 P- P-	 CH - Ch -
 Down	 Down Down
 Vol+ Vol+	 + VOL Vol +
 Right	 Right Right
 Vol- Vol-	 VOL - Vol -
 Left	 Left Left
 Enter/CH List	 OK Ok
 Exit	 CLEAR EXIT Exit
 Freeze / [≡+] [≡+]	 FAV PRE-CH Pre Ch
 Red	 A Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

