











 


 

 
 
 
 


 
 




 








Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 Format
 CH+	 Ch +
 CH-	 Ch -
 MTS	 Media
 Set	 Pre Ch
 Home	 Smart
 Mouse	 TV/R
 Menu	 Menu
 Source	 AV
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Exit	 Exit





Original	Recharge	Original	Recharge
Display	Info	Hold	Shift + Stop
Red	Red	Mix	Shift + Text
Green	Green		
Yellow	Yellow		
Blue	Blue		
<< / Text	<<		
<< / Text	Text		
Play/Pause /	Play		
Play/Pause /	Pause		
>> / Reveal	>>		
I<< / Cancel	I<<		
>>I / Freeze	>>I		
Stop / Index	Stop		
EPG	Guide		
Rec	Rec		
Sub-T	Subt		
Size	Eject		

Original	Recharge	Original	Recharge
Hold	Shift + Stop		
Mix	Shift + Text		

