



	Original	Rechange	Original	Rechange
	Power	Power		OK
	Sub-T	Subt		FAV
	TTX	Text		Exit
	Mute	Mute		Tv/Radio
	Goto	Smart		Recall
	Repeat	Shift + Text		Info
	EPG	Guide		1
	Lang	Dual		2
	Menu	Menu		3
	Page+	Ch +		4
	Page-	Ch -		5
	Up/CH+	Up		6
	Down/CH-	Down		7
	Right	Right		8
	Vol+	Vol +		9
	Vol-	Vol -		0
	Left	Left		<<





Original	Recharge	Original	Recharge
>>	>>		
I<<	I<<		
>>	>>		
Play	Play		
Pause/Timeshift	Pause		
Stop	Stop		
Rec	Rec		
Red/PVR	Red		
Green/V-Format	Green		
Yellow/Aspect	Yellow		
Blue/Timer	Blue		





Original		Rechange		Original		Rechange	
	Standby		Power		Right / Vol +		Vol +
	Sub-T		Subt		Left / Vol -		Left
	TTX		Text		Left / Vol -		Vol -
	Mute		Mute		OK		Ok
	EPG		Guide		FAV		Shift + Pre Ch
	Lang		Dual		TV / Radio		TV/R
	GOTO		Shift + Guide		Recall		Pre Ch
	Repeat		Shift + Text		Info		Info
	Page +		Shift + Up		1		1
	Page -		Shift + Down		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9





Original	Rechange
0	0
<< Rev	<<
>> Fwd	>>
I<< Prev	I<<
>>I Next	>>I
Play	Play
Pause / Timeshift	Pause
Stop	Stop
Rec	Rec
Red / PVR	Red
Green / V-Format	Green
Green / V-Format	Format
Yellow / Aspect	Yellow
Yellow / Aspect	SHIFT +  Format
Blue / Timer	Blue
Blue / Timer	AV

Original	Rechange

