





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Red/Rec/Instant		Red		Vol+		Vol +
	Green/<<		Green		Vol-		Vol -
	Yellow/Stop		Yellow		Mute		Mute
	Blue/play		Blue		P+		Ch +
	White/>>/□		>>		P-		Ch -
	>◆		D. Menu		1		1
	[   ]		Guide		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch





Original		Recharge		Original		Recharge	
	[i+]		Info				
	I-II		Dual				
	[> <]		Subt				
	[1 2]		3D				
	[ ]>		AV				
	Smart		Smart				
	[ ] Smart		Media				
	[ <> ]		Back				
	[-o-]/Active Control		Options				





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Rechange
 [ > < ]	 Subt
 [ 1 2 ]	 3D
 [ ]->	 AV
 ♪ Smart	 Smart
 [ ] Smart	 Media
 [  <>  ]	 Back
 [-o-]/Active Control	 Options

Original	Rechange





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original		Rechange	
	[> <]		Subt
	[1 2]		3D
	[ ]→		AV
	♪ Smart		Smart
	[ ] Smart		Media
	[ <> ]		Back
	[-o-]/Active Control		Options

Original		Rechange	

