


 







 













 











 



 










 










Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <</Zoom+	 << / Tune-
 >>/Zoom-	 >> / Tune+
 Lan/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Tv/Radio	 TV/Radio /
 Text	 Text / Goto
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 V+	 Vol+
 Auto	 Smart / List
 Ch+	 CH+ / Page+
 V-	 Vol-
 Game	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Recharge
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green/Lan/Audi	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
A1	 Shift + 1
A2	 Shift + 2
A3	 Shift + 3
A4	 Shift + 4
B1	 Shift + 5
B2	 Shift + 6
B3	 Shift + 7
B4	 Shift + 8

Original	Recharge

