

 
 
 



 



 



 






 








 
 

 

 



 

 

 

 

 
 
 
 
 




 
 



 



 




Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Time/Play		Format		0		0
	Clock/Timer		AV		+10		Pre Ch
	Dimmer		Media		DEL		D. Menu
	Auto Off		Blue		Program		Shift + Sleep
	Sleep		Sleep		Repeat		Text
	Vol+		Vol +		Play Mode		Shift + Play
	Vol-		Vol -		USB Play/Pause		Pause
	Mute		Mute		CD Play/Pause		Play
	1		1		AUX		Green
	2		2		I<</<<		<<
	3		3		Radio		TV/R
	4		4		>>/>>I		>>
	5		5		Stop		Stop
	6		6		Re-Master		Back
	7		7		D.Bass		Exit
	8		8		Display		Info





Original		Rechange		Original		Rechange	
	Surround		Dual				
	Bass		Subt				
	Preset EQ		Options				
	Treble		Smart				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	Auto Preset		Guide				
	Tune Mode		Red				
	FM Mode		Yellow				
	Input Level		3D				

