

 




 





 
 
 


 
 
 


 






 

 


 
 





 
 
















	Original	Rechange	Original	Rechange
	 Power	 Power	 5/Scan	 5
	 Stop	 Stop	 6/Repeat	 6
	 Pause	 Pause	 7	 7
	 Play	 Play	 8	 8
	 I<< Track/Search	 I<<	 9	 9
	 Track/Search >>I	 >>I	 0	 0
	 Menu	 Menu	 Aspect	 Format
	 Return	 Back	 Game	 Smart
	 Up	 Up	 DVD Menu	 D. Menu
	 Down	 Down	 OSD/Track	 Text
	 Right	 Right	 Title/Title Chapter	 Options
	 Left	 Left		
	 Enter	 Ok		
	 1/Subtitle	 1		
	 2/Audio	 2		
	 3/Angle	 3		
	 4/Random	 4		

