




 




 
 

 

 





 

 


 
 
 
 

 

 

 





 

 



 
 

 
 
 



 



 
 

 




 








 




Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	Timer Play		Eject		Mute		Mute
	Clock/Timer		Shift + AV		Radio/Ext-IN		Text
	Program		Shift + Sleep		USB		AV
	1		1		CD		TV/R
	2		2		I<<		I<<
	3		3		Play/Pause		Play
	4		4		>>I		>>I
	5		5		<<		<<
	6		6		Stop		Stop
	7		7		>>		>>
	8		8		D.Bass		Subt
	9		9		Sound		Dual
	0		0		Preset EQ		Back
	+10		Guide		Auto Preset		Options
	DEL		Exit		Play Menu		D. Menu





Original		Recharge		Original		Recharge	
	Radio Menu		Menu				
	Display-Dimmer		Info				
	Auto Off		Format				
	Up		Up				
	Down/Album		Down				
	Right		Right				
	Left		Left				
	OK		Ok				

