



Original	Rechange
Power Receiver	Power
DVD	Shift + 2
TV	Shift + 1
Tuner / Band	Shift + 6
CD	Shift + 3
DVD Recorder	Shift + 5
VCR	Shift + 4
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Volume+	Vol+

Original	Rechange
Disc / Direct Tuning	Display / Media
0	0
≥10 / -/--	Guide / EPG / -/--
Volume-	Vol-
I<< / <<	I<< / Preset-
>> / >>I	>>I / Preset+
Up	Up
Menu / Play List	Menu / Home
Left	Left
Enter	OK
Right	Right
Down	Down
Subwoofer	Eject / Surround
Test	Text / Goto
< / -/L	CH- / Page-
> / +/R	CH+ / Page+
Level	Smart / List





Original	Recharge
Effect	Info / Angle
Stereo / 2CH Mix / OFF	Audio / Lang I/II
Dolby PL II	Sound / Title
SFC	Subtitle / EQ
Muting	Mute / Dimmer

Original	Recharge

