




 

 



 


 










 





 



 


 
 



 
 



 
 









 





Original	Rechange	Original	Rechange
 Power	 Power	 OK	 Ok
 Menu	 Menu	 Netflix	 Media
 [ + ]/Aspect	 3D	 Home	 Smart
 Input TV	 TV/R	 Guide	 Guide
 Input AV	 AV	 Mute	 Mute
 Red	 Red	 Text	 Text
 Green	 Green	 STTL	 Subt
 Yellow	 Yellow	 APPS	 Shift + Smart
 Blue	 Blue	 Vol+	 Vol +
 i	 Info	 Vol-	 Vol -
 X/Exit	 Exit	 CH+	 Ch +
 Option	 Options	 CH-	 Ch -
 Back/Return	 Back	 1	 1
 Up	 Up	 2	 2
 Down	 Down	 3	 3
 Right	 Right	 4	 4
 Left	 Left	 5	 5



