




 



 









 







 



 



 

 
 



 

 
 
 


 
 


 









 










 



 


















 

 








Original		Rechange		Original		Rechange	
	Power		Power		7		7
	[+]		Info		8		8
	Tv/AV		AV		9		9
	Mute		Mute		0		0
	^		Ch +		-/--		Guide
	v		Ch -		Timer		Shift + AV
	Vol+		Vol +		N		Media
	Vol-		Vol -		Menu		Menu
	V		Ok		Mood Light		Format
	V+		Right		Red		Red
	V-		Left		Green		Green
	1		1		Yellow		Yellow
	2		2		Blue		Blue
	3		3		Power VCR		Shift + Power
	4		4		Audio Out VCR		Dual
	5		5		^ VCR		Up
	6		6		v VCR		Down





Original	Recharge	Original	Recharge
 Stop	 Stop	 [≡↓]	 Exit
 Pause	 Pause	 [∴]	 Subt
 II>	 Back		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Tv/TXT	 Text		
 F.P.	 Pre Ch		
 [/≡]	 Options		
 [≡ ←]	 Eject		
 [≡?]	 TV/R		
 [≡◇]	 3D		
 [≡i]	 List		
 [≡+]	 D. Menu		
 [≡o]	 Smart		
 [≡x]	 Sleep		

