



Original	Recharge
Power DVD	Shift + Power
Power TV	Power
CH + TV	Shift + CH+ /
Vol + TV	Vol+
Select Drive	Smart / List
AV TV	Shift + AV / Input / RDS
CH - TV	Shift + CH- /
Vol - TV	Vol-
1	1
2	2
3	3
CH / Page +	CH+ / Page+
4	4
5	5
6	6
CH / Page -	CH- / Page-
7	7

Original	Recharge
8	8
9	9
ShowView	Shift + Display / Media
*	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow / Search	<< / Tune-
Slow / Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
i	Info / Angle
Prog / Check	Shift + TV/Radio / Program
Guide	Guide / EPG / -/-





Original	Recharge
Direct Navigator	Menu / Home
Up	Up
Functions	D.Menu / Top
<   / Left	Left
Enter	OK
Right /   >	Right
S / Sub Menu	Shift + Menu /
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue / Manual	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Eject / Surround
Direct Tv Rec	TV/Radio /

Original	Recharge
Audio	Audio / Lang I/II
Status	Setup / OPT /
Display	Display / Media
Time Slip	Sleep / Timer

