






























 



 

 

 

 

 













 



 

















 





Original		Recharge		Original		Recharge	
	Power		Power		Yellow		Yellow
	Input		AV		Blue		Blue
	i		Info		Vol+		Vol +
	[G]		Guide		Vol-		Vol -
	*1		Format		Mute		Mute
	Home		Smart		P+		Ch +
	Netflix		Media		P-		Ch -
	*2		3D		1		1
	Exit		Exit		2		2
	Back		Back		3		3
	Up		Up		4		4
	Down		Down		5		5
	Right		Right		6		6
	Left		Left		7		7
	OK		Ok		8		8
	Red		Red		9		9
	Green		Green		0		0





	Original	Recharge	Original	Recharge
	Lang	 Dual		
	TXT	 Text		
	<<	 <<		
	Play	 Play		
	>>	 >>		
	Stop	 Stop		
	Pause	 Pause		
	Rec	 Rec		

