





 


 


 
 


 



 
 








 





 









 

 


 




 


 






 


 

 




Original	Rechange	Original	Rechange
	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Search		Shift + TV/R
	Show View		Smart
	OSD/Display		Info
	Replay		Pre Ch
	Direct Tv Rec		TV/R
	I<< Index		I<<
	Index >>I		>>I
	Rec		Rec
	Pause/Step		Pause
	Menu		Menu
	OK		Ok
	Play/Up		Play
	Stop/Down		Stop
	>>/Right		>>
	<</Left		<<
	SP/LP		Format

 
 
 

 
 
 
 
 
 
 
 


 



Original		Rechange		Original		Rechange	
	Timer Rec		3D		Exit		Exit
	Prog/Check		Sleep				
	Reset		Back				
	Audio		Dual				
	VPS/PDC		Subt				
	AV Link		Media				
	TV Aspect		Eject				
	Still Album		List				
	Up		Up				
	Down		Down				
	Date+		Right				
	Date-		Left				
	On+		Red				
	On-		Green				
	Off+		Yellow				
	Off-		Blue				
	Cancel		D. Menu				





Original	Recharge
 Power	 Power
 TV/Text	 Text
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Recharge
 AV Input Select	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

