

















 



 





 














 





Original	Recharge
 Power	 Power
 Timer/Play	 Info / Angle
 Clock/Timer	 Shift + Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 Auto Off	 Shift + Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 0	 0
 Program	 TV/Radio /
 +10	 Guide / EPG / -/-
 Del	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 AUX	 Shift + 7
 Play Mode	 Shift + Play /
 DAB/FM	 Red / Netflix / Search
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 Display	 Display / Media
 Play/Pause iPod	 Pause / Step / Freeze
 Re-Master	 Picture / Format
 Surround	 Eject / Surround





Original	Recharge	Original	Recharge
 D.Bass	 Audio / Lang I/II		
 Up	 Up		
 Down	 Down		
 iPod Menu	 Menu / Home		
 Right	 Right		
 Preset EQ	 Subtitle / EQ		
 Bass/Treble	 Sound / Title		
 Left	 Left		
 OK	 OK		
 DAB Menu	 D.Menu / Top		
 Auto Preset	 Smart / List		
 Tune Mode	 Blue / Prime Video / Random		
 DAB Secondary	 Yellow / YouTube / Repeat		

