



| Original | Recharge |
|------------|----------------------|
| Power | Power |
| Auto Setup | Auto |
| Computer 1 | Comp / Video |
| Computer 2 | Shift + Mode |
| HDMI | 3D / Invert |
| Video | Shift + Comp / Video |
| S-Video | Mode |
| Up | Up |
| Left | Left |
| Enter | Enter |
| Right | Right |
| Down | Down |
| Menu | Menu |
| Default | Shift + Power |
| Function | Source |
| Return | Shift + Menu |
| Freeze | Freeze / Timer |

| Original | Recharge |
|------------|----------------------|
| ID Set | Shift + Down |
| ID All | Shift + Up |
| Mute | Blank / Mute |
| D.Zoom+/1 | + / Play |
| Vol+/2 | Vol + / Page + |
| P-Timer/3 | Volt / Focus |
| AV Mute | Shift + Blank / Mute |
| D.Zoom-/4 | - / Stop |
| Vol-/5 | Vol - / Page - |
| Keystone/6 | Help / Info |
| P IN P | Eco / Aspect |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

