



Original	Recharge		
	Power		Power
	Input		AV / Input / RDS
	Menu		Menu / Home
	Picture		Picture / Format
	Text		Text / Goto
	STTL		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	i		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix / Search
	prime video		Shift + Blue / Prime / Random
	Left		Left
	Up		Up
	Right		Right

Original	Recharge		
	Rakuten Tv		Display / Media
	OK		OK
	Back		Back / Return
	Down		Down
	Home		Shift + Menu /
	Mute		Mute / Dimmer
	Option		Setup / OPT /
	Guide		Guide / EPG / -/-
	List		Shift + Smart / List
	Vol+		Vol+
	Smart Colors		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3





Original		Recharge		Original		Recharge	
	4		4		APPS	+	Shift + Green / APP /
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	?/eHelp		Audio / Lang I/II				
	0		0				
	Last View		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	My APP		TV/Radio /				
	YouTube	+	Shift + Yellow / YouTube / Repeat				

