



| Original | | Rechange | | Original | | Rechange | |
|----------|----------|----------|--------------------------|----------|----------------|----------|------------------------|
| | Power | | Power | | 8 | | 8 |
| | Power Tv | | Shift + Power | | 9 | | 9 |
| | Tv/AV Tv | | Shift + AV / Input / RDS | | Vol+ | | Vol+ |
| | Vol+ Tv | | Shift + Vol+ | | Cancel | | Exit / Cancel / Clear |
| | DVD | | Shift + 2 | | 0 | | 0 |
| | FM | | TV/Radio / | | +10 | | Guide / EPG / -/- |
| | EXT-IN | | AV / Input / RDS | | Vol- | | Vol- |
| | Vol- Tv | | Shift + Vol- | | I<< Skip | | I<< / Preset- |
| | 1 | | 1 | | Skip >>I | | >>I / Preset+ |
| | 2 | | 2 | | << Slow/Search | | << / Tune- |
| | 3 | | 3 | | Slow/Search >> | | >> / Tune+ |
| | Select > | | CH+ / Page+ | | Stop | | Stop / Hold |
| | 4 | | 4 | | Pause | | Pause / Step / Freeze |
| | 5 | | 5 | | Play | | Play / Slow |
| | 6 | | 6 | | Quick OSD | | Red / Netflix / Search |
| | < Select | | CH- / Page- | | [I] VS | | Green / APP / Repeat |
| | 7 | | 7 | | One Touch Play | | Fav / Marker / PC |



