 
 





 



 





Original	Recharge
 Power	 Power
 Source	 AV
 Top Menu	 Menu
 Disc Menu	 D. Menu
 Smart TV	 TV/R
 Bluetooth	 Guide
 Home	 Smart
 [=]	 Text
 OK	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Recharge
 Open/Close	 Eject
 Return	 Back
 III	 Options
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 <	 <<
 >	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4





Original		Recharge		Original		Recharge	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subt				
	Audio		Dual				

