







 



 






 










 
 


 

 
 
 





 



 



 



 
 


 













 





 







 





Original	Recharge	Original	Recharge
 Power	 Power	 Green	 Green / APP / Repeat
 Stop	 Stop / Hold	 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode	 i+/Info	 Info / Angle
 <<	 << / Tune-	 Options	 Setup / OPT /
 Play	 Play / Slow	 Up	 Up
 >>	 >> / Tune+	 Left	 Left
 Zoom / Size	 Zoom / Size	 OK	 OK
 D.Menu / Top	 D.Menu / Top	 Right	 Right
 Picture / Format	 Picture / Format	 Back	 Back / Return
 Tv Guide	 Guide / EPG / -/--	 Down	 Down
 Search	 Shift + Red / Netflix / Search	 Multiview	 Display / Media
 Sources	 AV / Input / RDS	 Vol+	 Vol+
 Smart Tv	 Smart / List	 List	 Shift + Smart / List
 Home	 Menu / Home	 CH+	 CH+ / Page+
 Exit/Tv	 Exit / Cancel / Clear	 Vol-	 Vol-
Red	Red / Netflix / Search	Mute	Mute / Dimmer





Original		Rechange		Original	Rechange
	CH-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Subtitle		Subtitle / EQ		
	0		0		
	Text		Text / Goto		

