


 
 


 



 



 












 



 
 

 

















 


















Original		Rechange		Original		Rechange	
	Standby		Power		HDD/Browser		Media
	CAM		Pre Ch		Guide/TV		Guide
	TV/HDD		TV/R		Up		Up
	Return		Back		Down		Down
	Edit		Format		Right		Right
	Timer		AV		Left		Left
	Select		Options		OK		Ok
	Y/Tuner		Text		CH+		Ch +
	Menu/System		D. Menu		CH-		Ch -
	Menu/Disc		Menu		Stop		Stop
	Info		Info		Pause		Pause
	Vol+ Tv		Vol +		Play		Play
	Vol- Tv		Vol -		I<<		I<<
	Red		Red		Rec/OTR		Rec
	Green		Green		>>I		>>I
	Yellow		Yellow		Jump Back		<<
	Blue		Blue		Jump FWD		>>



