


 

 





 

 






 



 

 
 

 

 
 
 

 


 
 

 



 
 
 







 










 
 
 



 
 
 
 



Original		Recharge		Original		Recharge	
	Power		Power		OK		Ok
	I<<		I<<		Exit		Exit
	Stop		Stop		Options		Options
	>>I		>>I		Page/CH -		Ch -
	<<		<<		Page/CH +		Ch +
	Play / Pause		Play		Vol -		Vol -
	Play / Pause		Pause		Vol +		Vol +
	>>		>>		Red		Red
	Guide		Guide		Green		Green
	Source		AV		Yellow		Yellow
	Format		Format		Blue		Blue
	Menu		Menu		1		1
	Info		Info		2		2
	Up		Up		3		3
	Left		Left		4		4
	Right		Right		5		5
	Down		Down		6		6



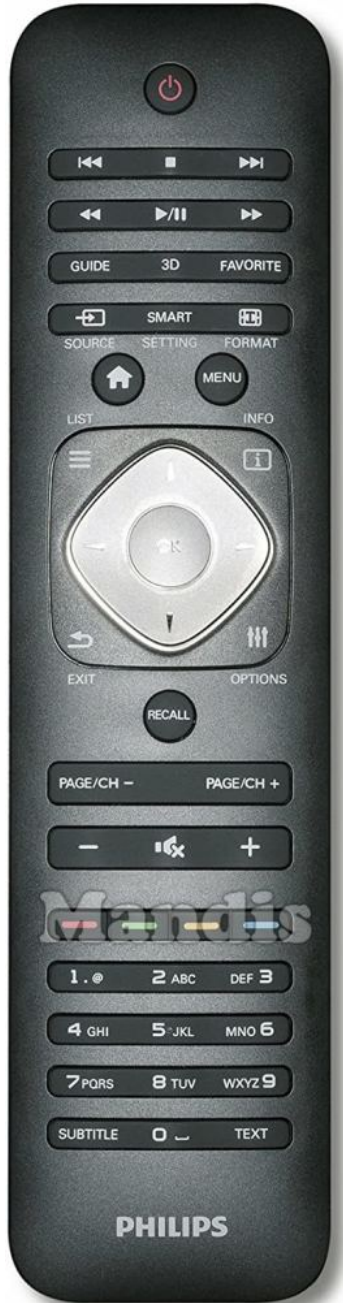

	Original	Recharge		Original	Recharge
	7		7		
	8		8		
	9		9		
	0		0		

