


































































Original	Recharge
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Recharge
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat












































 


























	Original	Recharge	Original	Recharge
	Repeat A-B	 Yellow / YouTube / Repeat		
	Program	 TV/Radio /		
	Clear	 Exit / Cancel / Clear		
	Title	 Sound / Title		
	Shuffle	 Blue / Prime Video / Random		







Original	Rechange
 Power	 Power
 TV / VCR	 TV/Radio /
 VCR	 Shift + 4
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Display / Media
 Up	 Up
 System Menu	 Menu / Home

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Input	 AV / Input / RDS
 Rec / ITR	 Rec / Rec Mode
 Program	 Shift + TV/Radio / Program
 Clear	 Exit / Cancel / Clear
 LP	 Setup / OPT /
 C.Lock	 Back / Return





Original	Recharge
 Show View / Video Plus	 Smart / List

Original	Recharge

