

 


 







 



 



 

 

 
 


 










 
 





 


 
 

 


 
 

 
 

 
 
 







Original		Recharge		Original		Recharge	
	Power		Power		<<		<<
	Ambilight		Pre Ch		Play		Play
	Windows		Shift + Media		>>		>>
	Tv/Exit		Exit		Stop		Stop
	Rakuten Tv		TV/R		Pause		Pause
	Menu		Menu		Rec		Rec
	Netflix		Media		Red		Red
	Pair/Sources		AV		Green		Green
	Smart/Colors		Smart		Yellow		Yellow
	Up		Up		Blue		Blue
	Down		Down		Vol+		Vol +
	Right		Right		Vol-		Vol -
	Left		Left		Mute		Mute
	OK		Ok		Tv Guide		Guide
	←		Back		CH+		Ch +
	+		Options		CH-		Ch -
	Home		Shift + Smart		1		1



