




 


 
 
 

 
 











 


 
 


 


 

 


 














 

 

 

 

 

 






Original		Rechange		Original		Rechange	
	Power		Power		Stop/Open/Clos		Stop
	Red		Red		Stop/Open/Clos		Eject
	Green		Green		>>		>>
	Yellow		Yellow		<<		<<
	Blue		Blue		>		>>
	Pop Up Menu/Disc Menu		D. Menu		<		<<
	Top Menu		Menu		1		1
	Home		Smart		2		2
	OK		Ok		3		3
	Up		Up		4		4
	Down		Down		5		5
	Right		Right		6		6
	Left		Left		7		7
	Back		Back		8		8
	≡/Options		Options		9		9
	Play		Play		0		0
	Pause		Pause		Subtitle		Subt



