 

 

 

 

 



 





 



 













 



 



 

 

 

 

 

 

 

 
 




 



 







 

 

 



 











 

 



 



 



Original	Recharge
 Power	 Power
 CD Direct 1	 1
 CD Direct 2	 2
 CD Direct 3	 3
 Repeat	 Green / APP / Repeat
 Shuffle	 Blue / Prime Video / Random
 Program	 TV/Radio /
 Sleep	 Sleep / Timer
 Timer	 Shift + Sleep / Timer
 Display	 Display / Media
 Side (only)	 Guide / EPG / -/--
 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Recharge
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Inc.Surr.	 AV / Input / RDS
 Flat	 Picture / Format
 Loudness	 Zoom / Size
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 Balance L	 Left
 Balance R	 Right



























 











 

 

 

 

 

 

 

 



Original		Recharge		Original		Recharge	
	Power		Power		Bass-		Down
	Sleep		Sleep / Timer		Bass+		Up
	Timer		Shift + Sleep / Timer		Treble-		CH- / Page-
	Side		Guide / EPG / -/-		Treble+		CH+ / Page+
	Pause		Pause / Step / Freeze		Balance L		Left
	Mute		Mute / Dimmer		Balance R		Right
	Vol-		Vol-				
	Vol+		Vol+				
	Play		Play / Slow				
	Stop		Stop / Hold				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Inc.Surr.		AV / Input / RDS				
	Flat		Picture / Format				
	Loudness		Zoom / Size				



 

 



 













 

 



 

 

 

 



 
 
 







 

Original	Recharge
	 Green / APP / Repeat
	 Power
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

Original	Recharge
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





Original	Recharge
 Power	 Power
 Power AUX	 Shift + Power
 AUX	 7
 Program	 TV/Radio /
 Sleep	 Sleep / Timer
 Timer	 Shift + Sleep / Timer
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Inc.Surr.	 AV / Input / RDS
 Flat	 Picture / Format
 Loudness	 Sound / Title

Original	Recharge
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 Balance L	 Left
 Balance R	 Right

